

All engines  
with oil bath air filter

### Note

Check oil level and amount of dirt in oil bath air filter at every lubrication service. Clean filter if necessary.

In severe dust conditions overhaul filter at **more frequent** intervals.

- Remove complete air filter for cleaning.
- Clean upper and lower parts of air filter.
- Clean filter element with diesel oil or petroleum and blow out with compressed air.

**Attention!** When cleaning air filter element do not use cotton waste, water, lyes or fluids containing acids.

- Before refitting filter **re-fill with fresh oil** up to upper mark. To do this hold air filter horizontal.

